


BOBBIN IN THE TECHSEW 2750 HOW TO INSERT IN THE CASE & INSTALL

V2


MAY 1-2024

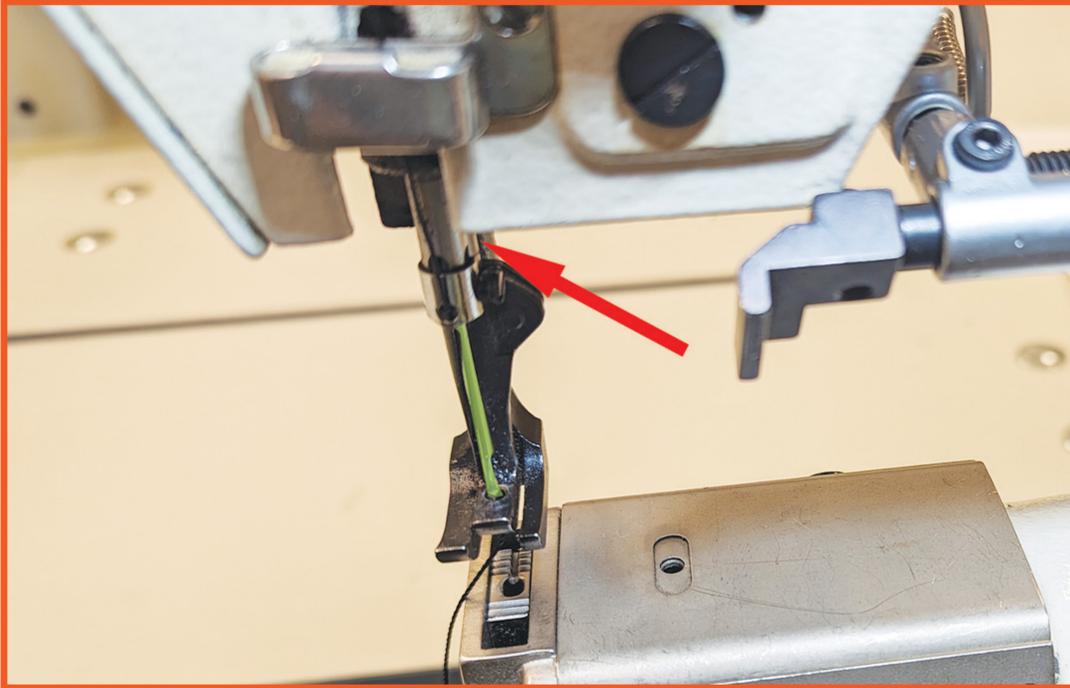


**1**

Make sure the needle (tinted green here) is in the most upright position (as far up as it can go).


You should also have the foot lifted up, using the lever on the backside.

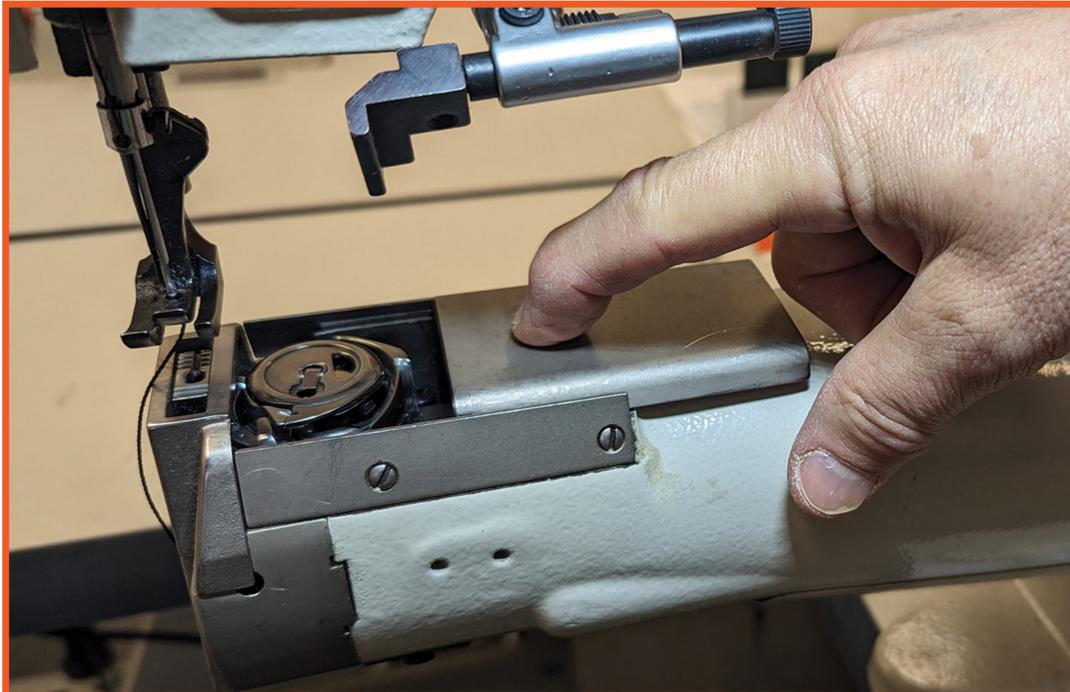**2**

To access the bobbin case, Place your finger on the bobbin plate, and slide it to the right to open it.

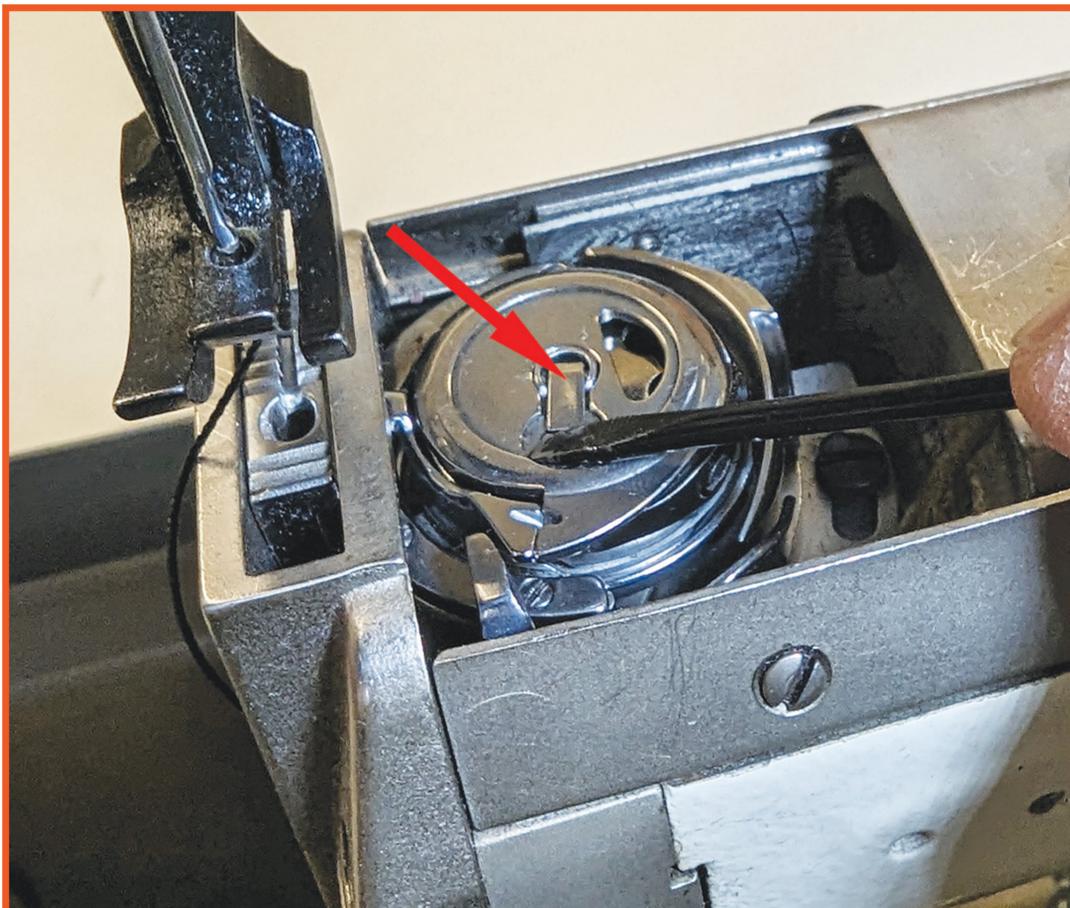**3**

Using a small screw driver, locate the bobbin case arm. Slide it under the front of the arm, and lift it up.

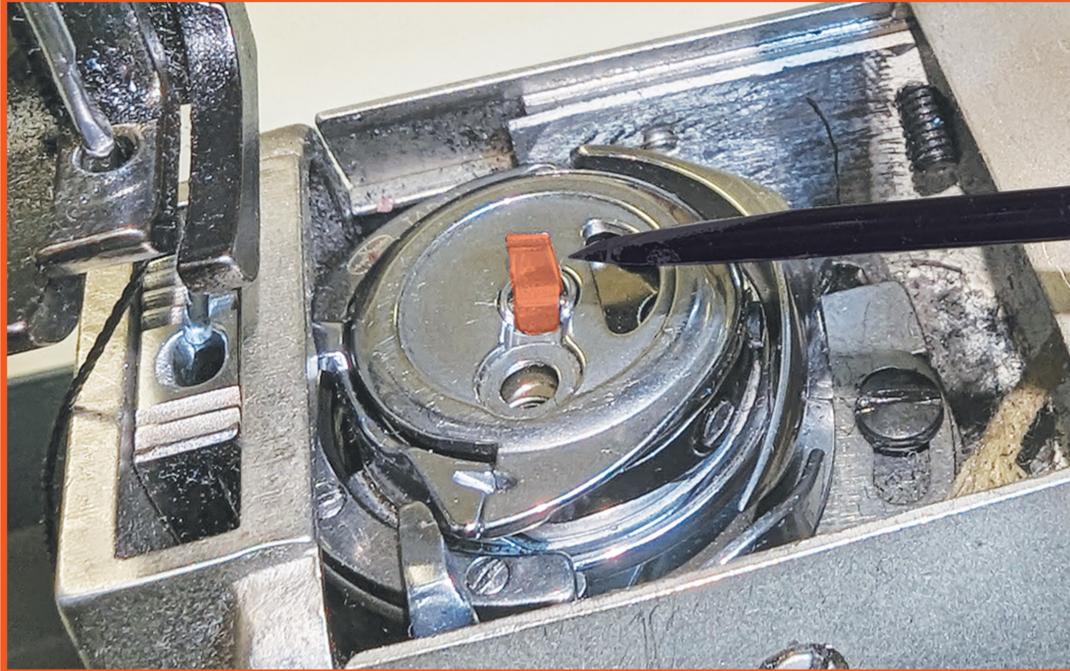

4

The bobbin arm up is up here, tinted orange here for clarity. The black is the screwdriver.




5

Place the small screwdriver under the triangle shaped part of the bobbin case and pull it up. The actual case is tinted purple here for clarity.



6

You can now grab the case and bobbin with your fingers and lift it out, separately or together.

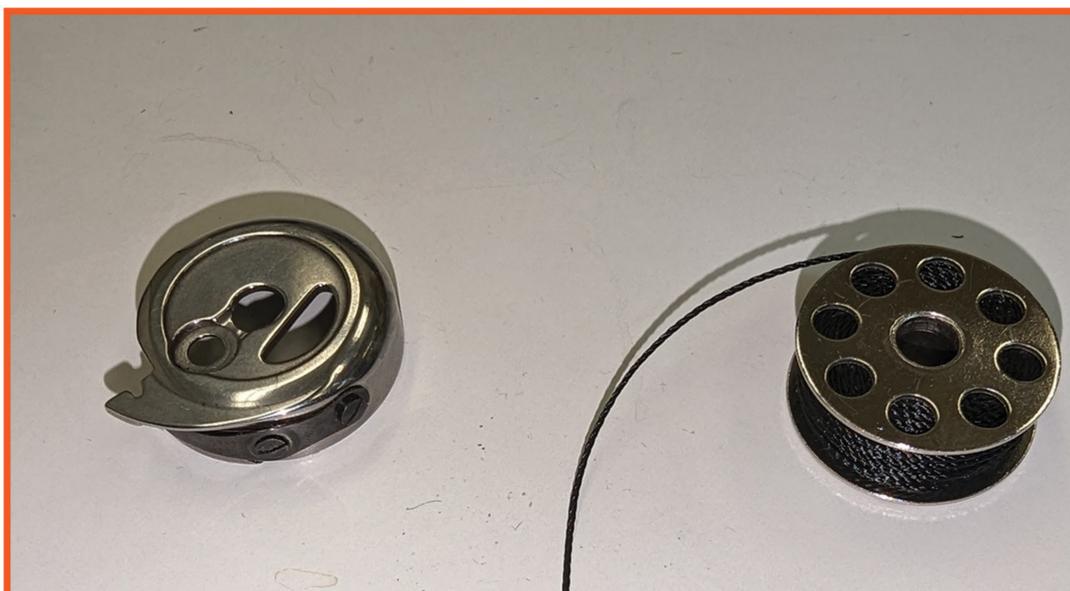

7

Now get a new bobbin, on the 2750's they are in the machine table drawer to the left.



8

Make sure the bobbin thread matches the thread that the top spool is using (the name is on the spool)...
So either: thin, medium or thick.

Also you require the proper needle size for the thread size.


9


To replace the bobbin with a new one, hold the bobbin in your hand, imagine the bobbin is winding in a clockwise rotation, holding the thread out the left side.



10

Now slide the bobbin case over the bobbin, lining up the thread to the bobbin case's slot.

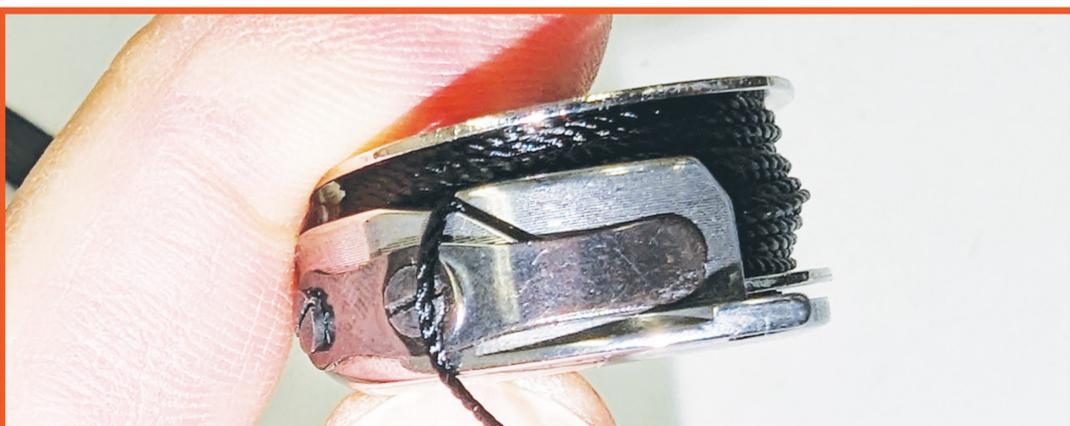

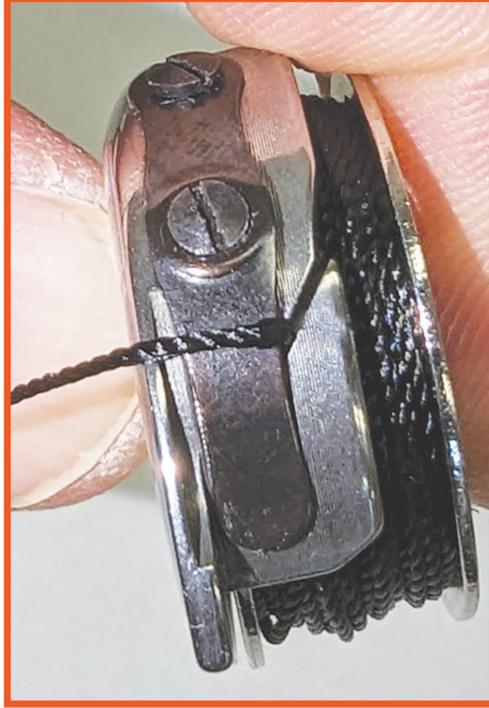

11

Now slide the thread into the slot.




12

Then holding it tight to the case, drag it up under the tang/thread tensioner ...




13


and into the slot on the top triangle.

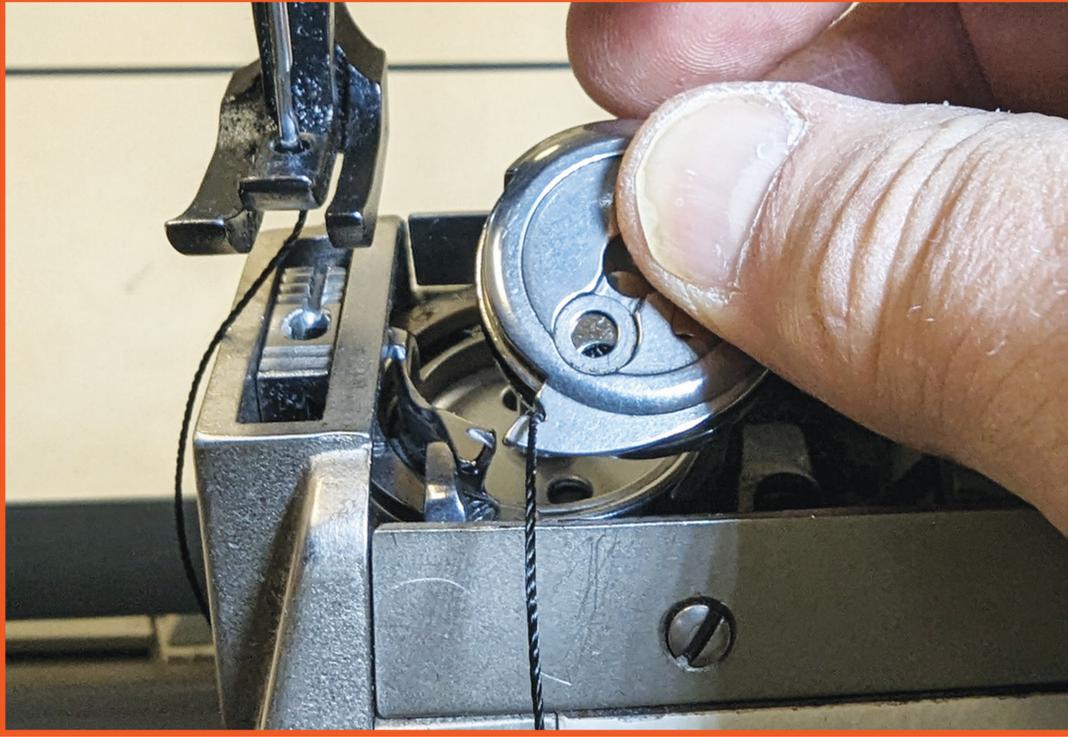**14**


Holding the bobbin and the case, tip it into the 2750, aligning the triangular parts and notches.

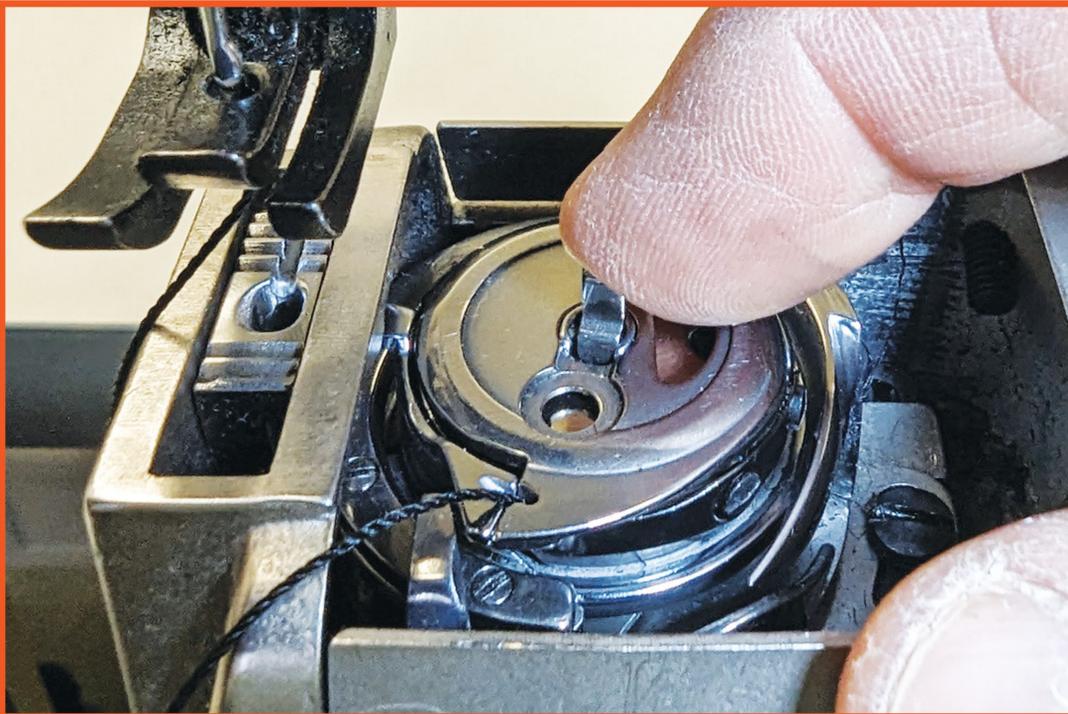**15**

Push the bobbin case in so it is aligned and flush with the holder. Make sure the thread is coming through the slots and is laying onto the front of the machine.

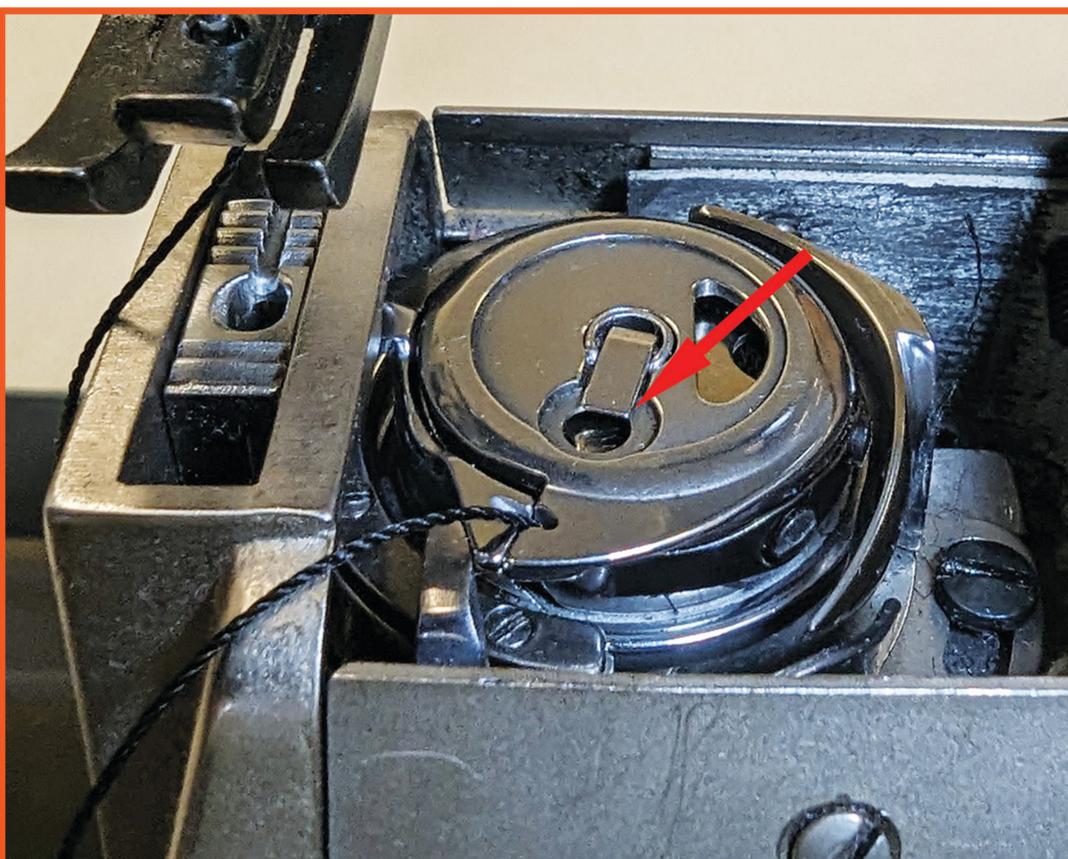**16**

Push the bobbin case arm down.

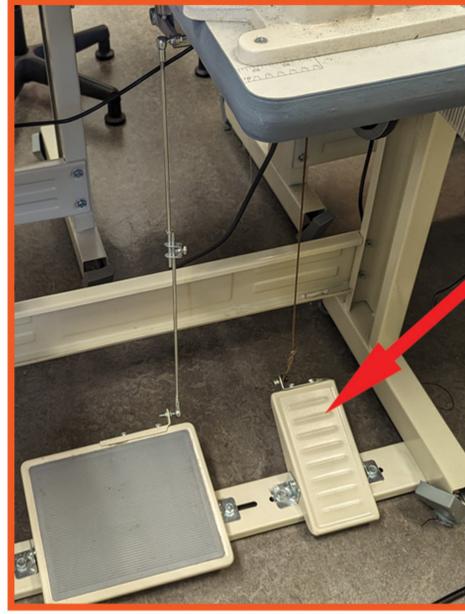


17

Make sure the sewing foot (walking foot) is up, either by using the lever in the back of the machine or using the foot pedal lift. If you are using the pedal lift, you will have to keep your foot on it and depressed.




18

Hold onto the needle thread and..... using the hand wheel (the right side), rotate the needle through a full cycle: so from all the way up, to all the way down, and back up again.

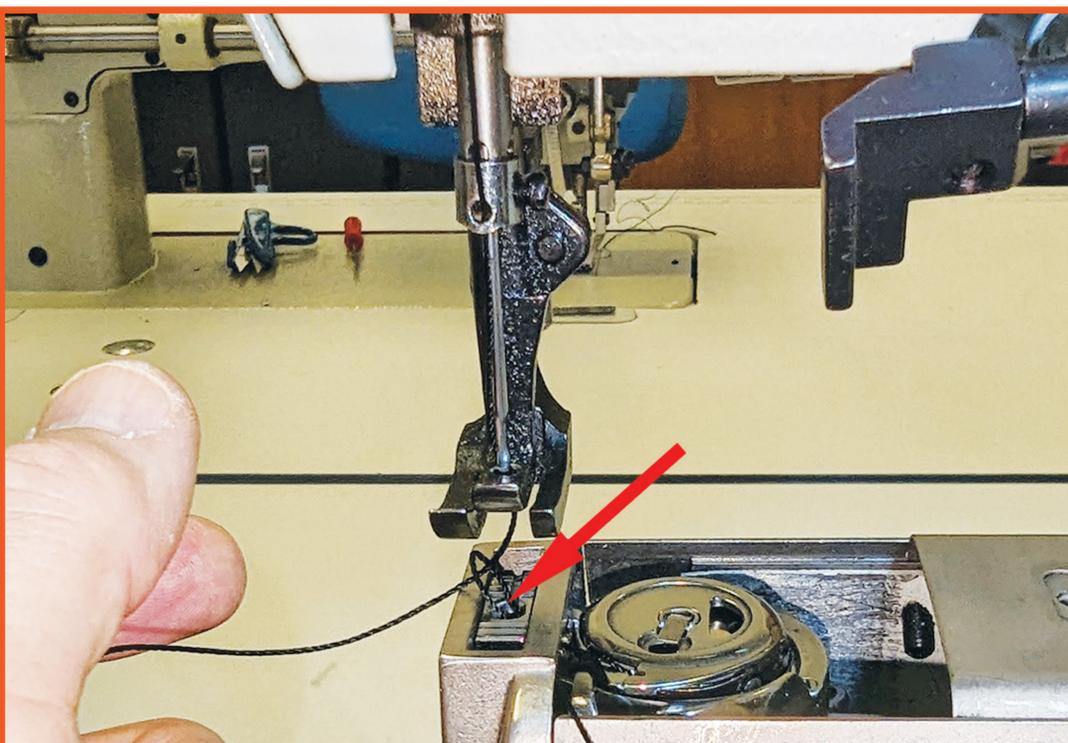


19

The needle and hook will then of grabbed the bobbin thread and there will be a loop just below the feet.

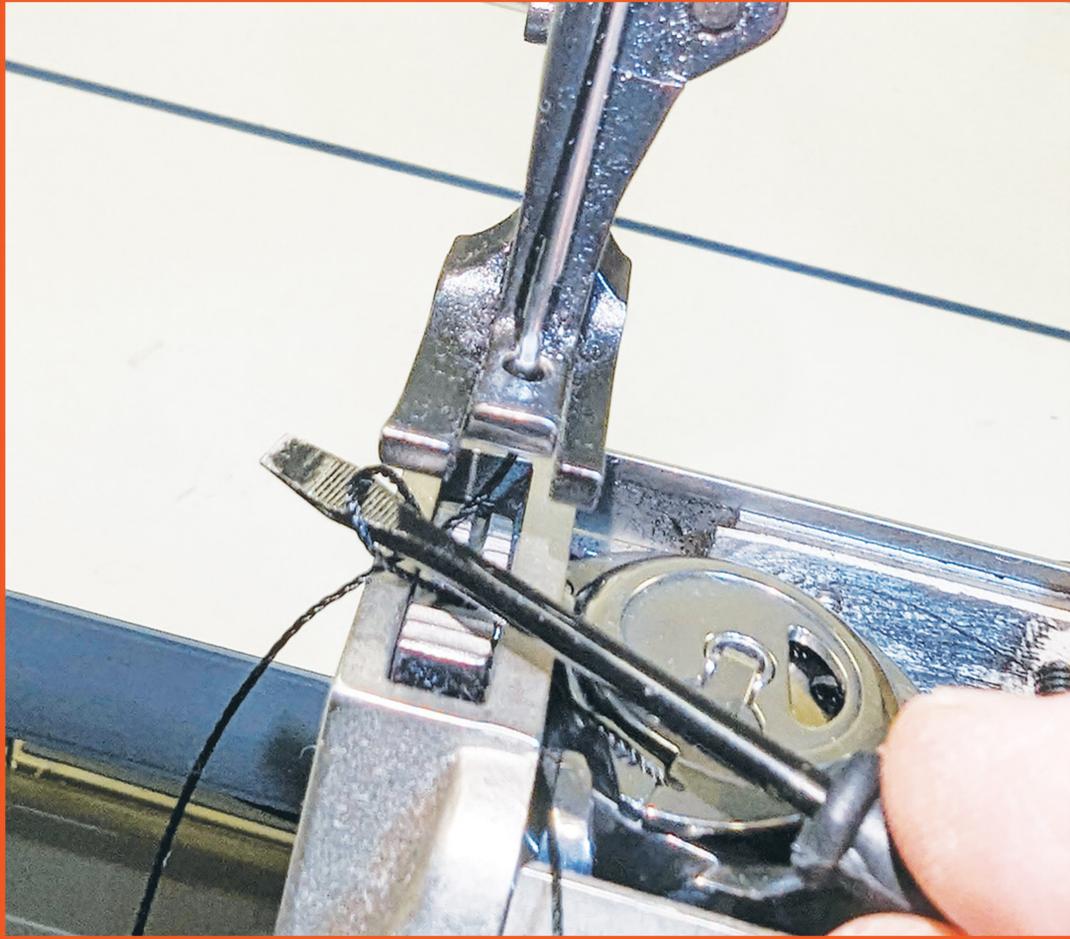


20

Using a small screw driver, grab the loop and pull. Pull the thread until the loose end of the bobbin thread appears.

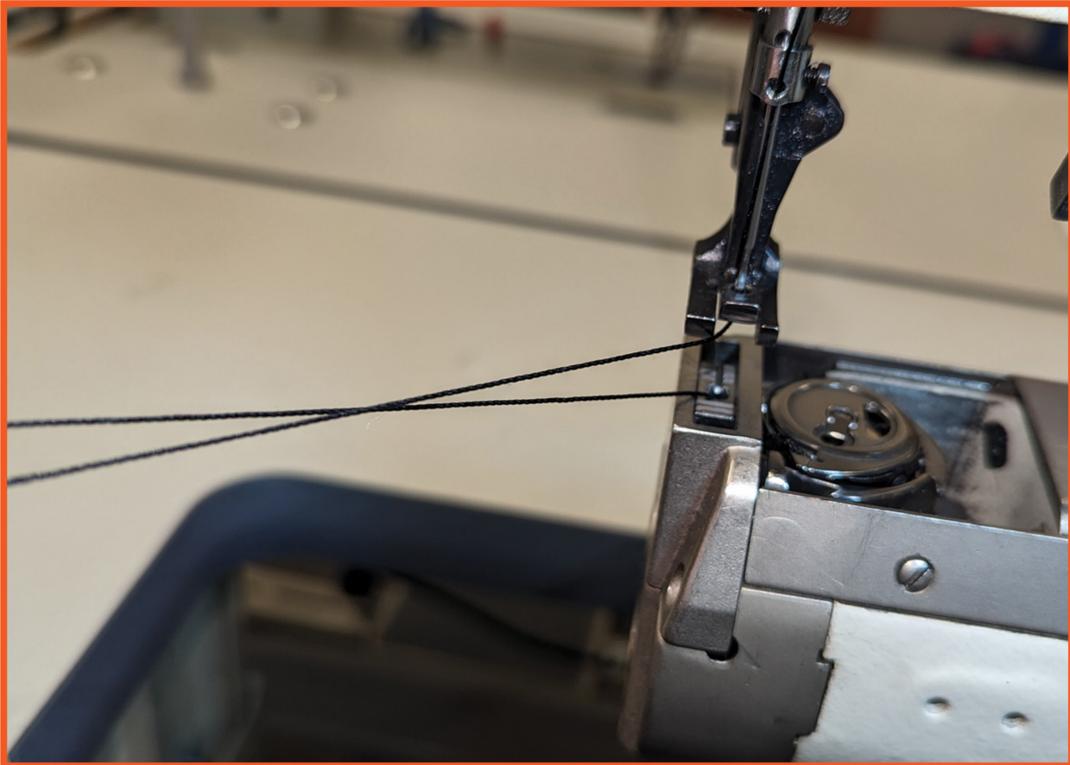

21

Pull both threads together and leave on the left side. **Don't forget to hold both threads when ever starting a stitch.**

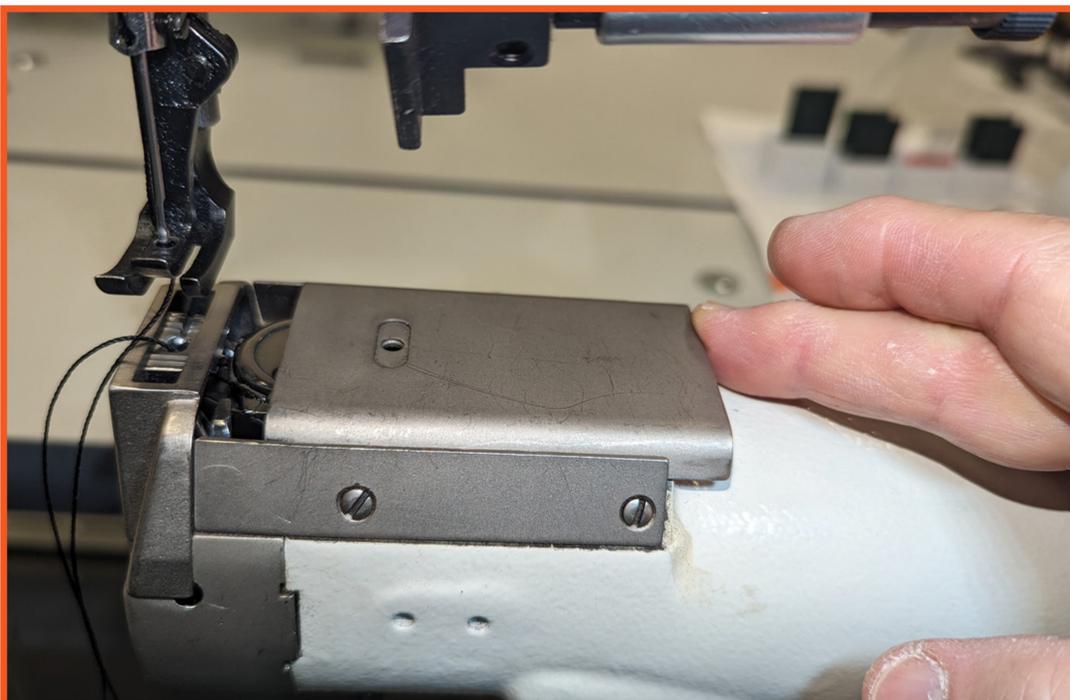

22

Slide closed the bobbin plate/cover.

PLEASE REMEMBER, TO ALWAYS HOLD BOTH THREADS WHEN STARTING A STITCH!